CONVERTIBLE
INSTRUCTIONS

TIPS

FACTS

CONVERTIBLE
weight: 10 lb. 8 oz.
volume: 500 in^3
torso size: 15-20"

NOTE:

- KELTY carriers are meant to be used **BY ADULTS** only.
- KELTY carriers are designed to transport one child weighing no more than 40 lb. (18.1 kg).
- The total load limit including the child AND cargo is 50 lb. (22.7 kg).

CARRIER

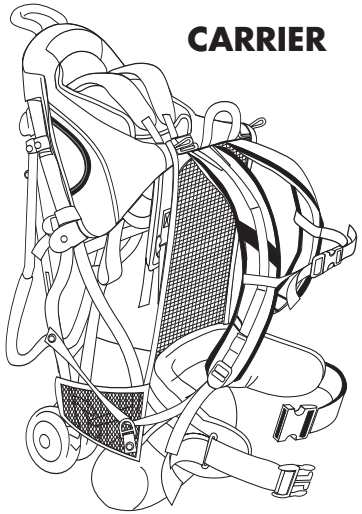

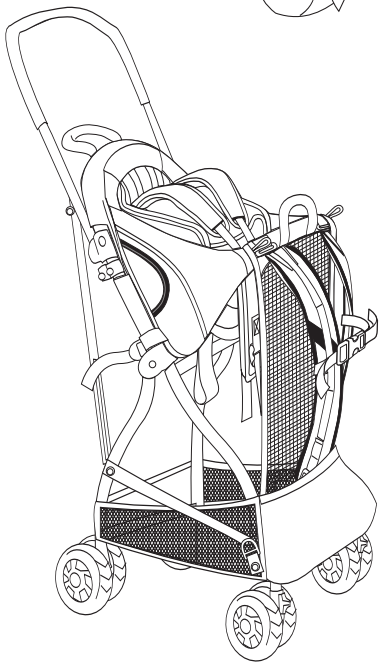

STROLLER

SAFETY INFORMATION

-IMPORTANT-

Read and follow all instructions before assembling and using this frame child carrier/stroller!

⚠ WARNING
FALL OR STRANGULATION HAZARD

- Small children can fall through the leg opening. Child could suffer head injuries or become entangled in straps and strangulation could occur.
- Adjust leg openings to smallest possible size.
- DO NOT use Convertible with a child weighing more than 40 lb.
- DO NOT use Convertible if child cannot hold head upright and sit up unassisted.

Failure to follow this warning could cause death, serious injury or permanent disability to your child.

⚠ WARNING
PROTECT YOUR CHILD

- DO NOT exceed maximum weight limits.
  - * Excessive weight may cause a hazardous, unstable condition.
  - * Parcels or accessory items placed on the handle of this product may cause the stroller to become unstable.
- DO NOT place more than one child in the Convertible.
- DO NOT use the Convertible as a car seat, child seat, or high chair.
- DO NOT place the Convertible on soft, uneven or elevated surfaces.
- DO NOT allow your child to stand on the Convertible seat.
- DO NOT use Convertible if your child will not ride calmly in Convertible.
- DO NOT place Convertibler near a campfire, cook stove or open flame.
- DO monitor child while in Convertible. Periodically check the child's position.
- DO fasten child's harness when in use.
- DO NOT use, or leave Convertible on steep grades, inclines or hills.
- DO assure your child is dressed properly for the weather. Periodically check the child's comfort.
- DO protect your child from the harmful effects of the sun.
- If your child has special needs, consult with a physician before using a Kelty Convertible. The Convertible may not be appropriate for special needs children.

Failure to follow this warning could cause death, serious injury or permanent disability to your child.

SAFETY INFORMATION

-IMPORTANT-

Read and follow all instructions before assembling and using this frame child carrier/stroller!

⚠ WARNING

STROLLERS TO BE USED BY ADULTS ONLY

- DO NOT use the Convertible while skating, biking or engaging in any activity that will affect your balance.
- DO NOT use Convertible if you feel faint, dizzy, nauseated or experience muscle pain.
- DO NOT bend at the waist when using the Convertible as a carrier. Bend at the knees to avoid pitching the child forward.

Failure to follow this warning could cause death, serious injury or permanent disability to you or your child.

⚠ WARNING

DO NOT USE A DAMAGED CONVERTIBLE

- DO NOT overload. Overloading may damage or break the Convertible.
- DO NOT fold incorrectly. Incorrect folding may damage or break the Convertible.
- DO NOT use accessories or replacement parts other than those produced or approved by Kelty. Use of unapproved accessories or replacement parts may affect handling and stability or damage or break the Convertible.
- DO check to assure all buckles snaps, straps, and adjustments are secure before each use.
- DO check the condition of Convertible before each use.
- DO NOT use the Convertible if the frame, fabric, straps or buckles are damaged.
- DO NOT use the Convertible if it is in any way damaged or defective. Call Kelty Customer Support staff, toll free at 866-349-7225 (866-FIX-PACK).
- DO keep instructions for future use.

Failure to follow this warning could cause death, serious injury or permanent disability to your child.

CARE AND CLEANING

- Clean with mild detergent and a damp cloth.
- Allow carrier to air dry.
- Do not use bleach or liquid detergent.

CONVERTIBLE FEATURES

-BEFORE YOU START-

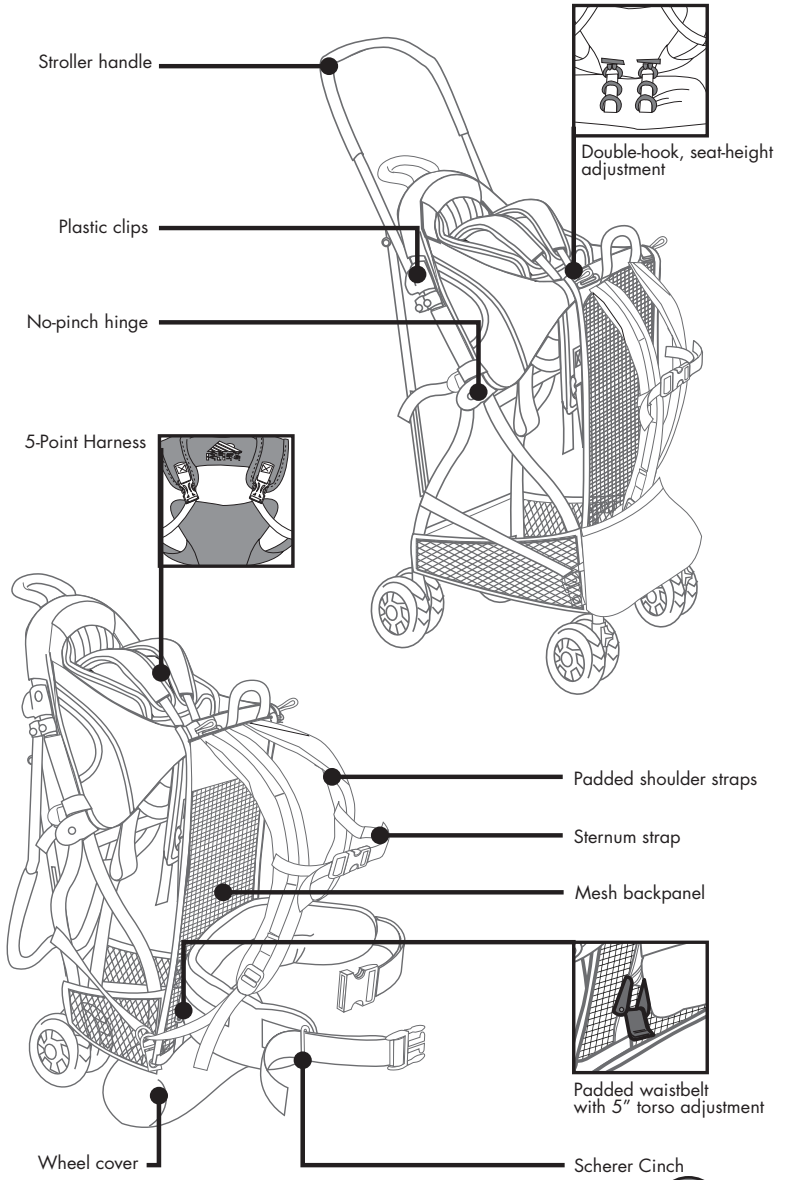

BEFORE YOU START
TENSION STRAPS

TIPS

NOTE:

Your new Kelty Convertible comes collapsed/folded for ease of shipping; it must be set up and adjusted prior to use.

1. TENSION STRAPS

To assure proper fit and function, the tension straps must be tightened before use. There are two tension straps located behind the mesh panel/adult shoulder straps. The tension straps are labeled "Please tighten before using."

A. Tension straps must be tightened to minimize cockpit frame movement.

B. Open the cockpit area by spreading the front cockpit frame away from the cockpit backrest. Reaching under the cockpit, grasp the end of the tension strap, and pull down to tighten (**Figure 1A**).

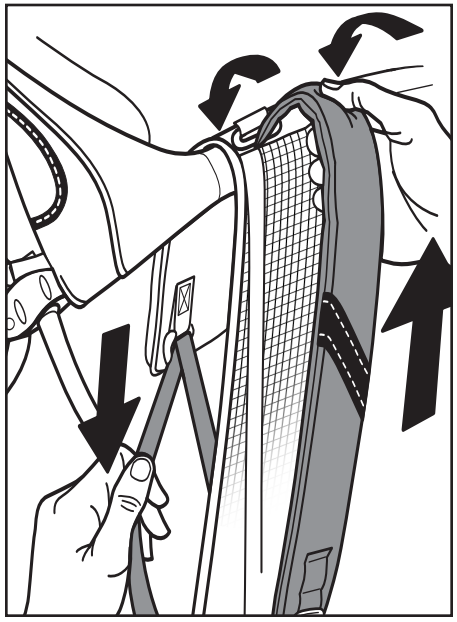

Figure 1A

C. Repeat step A for opposite side.

CONVERTIBLE ADJUSTMENT
ADULT BACKPACK FITTING

2. ADULT BACKPACK FITTING

A. Lock the front wheels in the forward position by aligning the sliding red lever with the locking tab located on the front of the frame (**Figure 2A**). Slide the red lever up to lock.

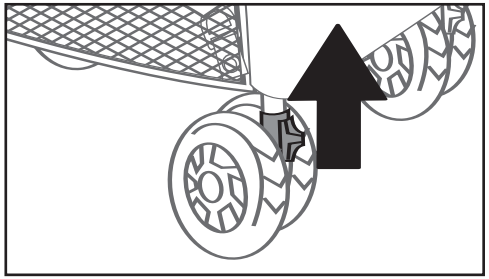

Figure 2A

B. Cover the front wheels by pulling the wheel cover over and around the front wheels.

C. The waistbelt on your Convertible adjusts up and down using the straps and locking flip buckles located between the waistbelt and mesh backpanel. Release the flip buckles by rotating latch away from mesh backpanel (**Figure 2B**).

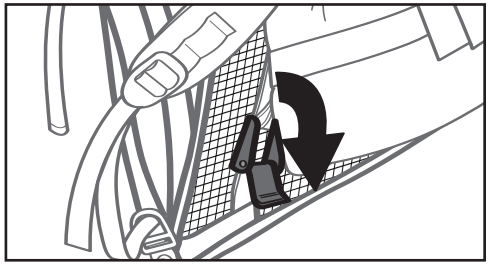

Figure 2B

D. Loosen the shoulder straps, waistbelt and sternum strap.

TIPS

NOTE:

- **DO NOT adjust Convertible with child in it.**
- **If sharing the Convertible between two adults, we recommend that you mark a reference point on the waist belt adjustment strap for each user. This will ease adjustment for each user.**

CONVERTIBLE ADJUSTMENT

ADULT BACKPACK FITTING

E. Put the carrier on by slipping arms through shoulder straps. Buckle waistbelt and adjust up or down so center of buckle lies over navel (**Figure 2C**). Tighten waistbelt by pulling inward on the pieces of webbing threaded through the Scherer Cinch (**shown on page 4**).

F. Tighten the shoulder straps by pulling down on the shoulder strap webbing. The shoulder straps should lie smoothly over your shoulders, with the upper end (at mesh backpanel attachment point) 1-2″ below top of shoulder (**Figure 2D**). Adjust waistbelt up or down to create best shoulder strap fit.

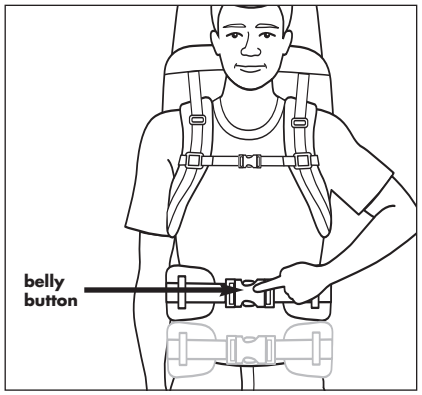

Figure 2C

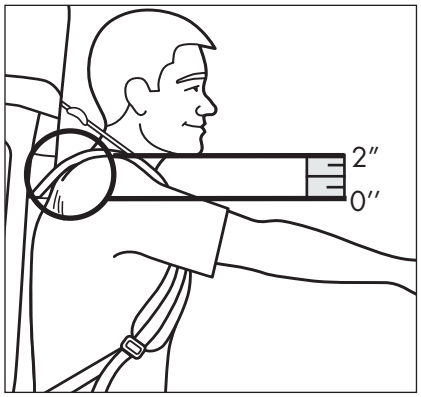

Figure 2D

G. When fitting is complete, remove carrier and lock flip buckles (**Figure 2E**).

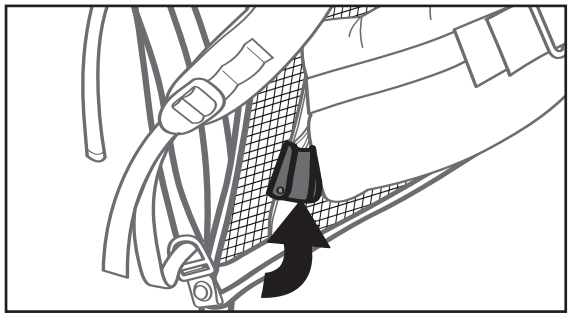

Figure 2E

CONVERTIBLE ADJUSTMENT

CHILD'S COCKPIT ADJUSTMENT

3. CHILD COCKPIT ADJUSTMENT

Before starting, make sure the child's shoulder harness is unbuckled (**Figure 3A**) and the leg straps, located on the back of the cockpit, are fully loosened (**Figure 3B**).

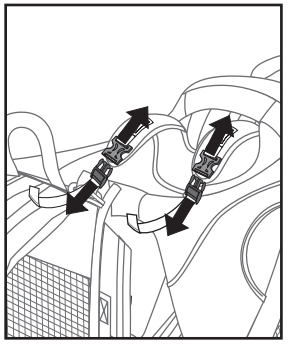

Figure 3A

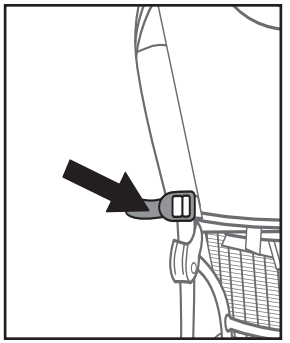

Figure 3B

A. Place the Convertible on the floor or on firm, level ground.

B. Make sure the side-release buckles attached to the silver webbing on the child's shoulder harness are unbuckled (**Figure 3C**).

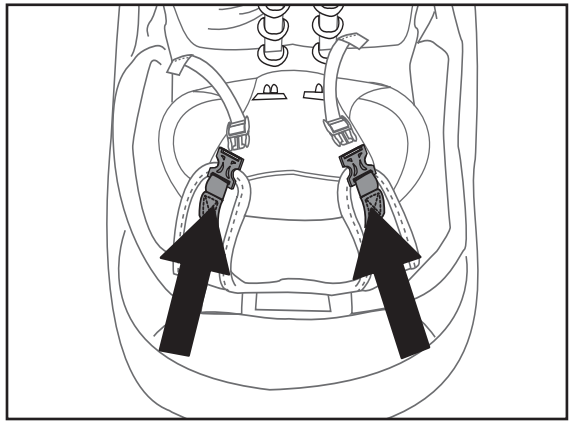

Figure 3C

TIPS

NOTE:

DO read all safety information prior to using your Kelty Convertible.

Proper fit and adjustment will make using your Convertible more enjoyable for you and your child.

CONVERTIBLE ADJUSTMENT

CHILD'S COCKPIT ADJUSTMENT

C. Adjust the cockpit seat height by attaching the two snap-hooks to the desired steel rings at the front of cockpit (**Figure 3D**). There are three sets of steel rings for seat-height adjustment. To raise the seat height, attach to the upper seat rings. To lower, attach to the lower rings.

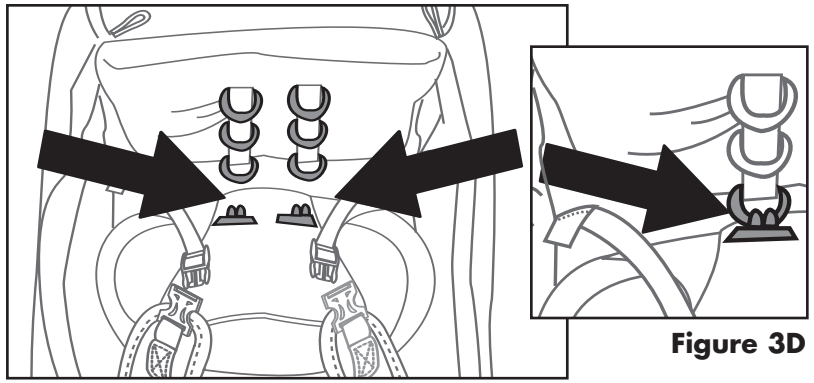

Figure 3D

D. Place child into cockpit. Make sure both legs go through leg openings (**Figure 3E and 3F**).

NOTE: Your child's legs must go under the padded, silver leg straps.

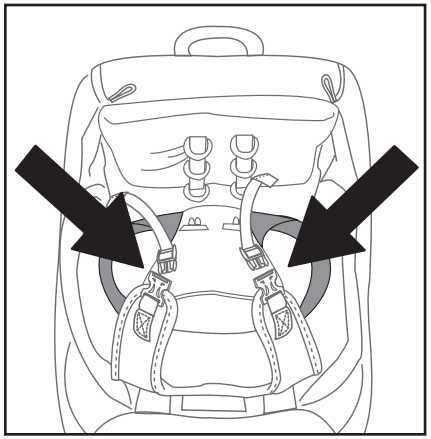

Figure 3E

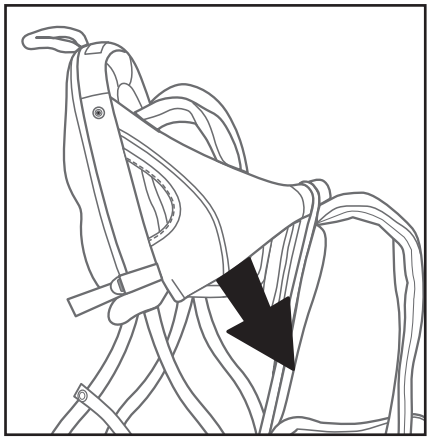

Figure 3F

CONVERTIBLE ADJUSTMENT

CHILD'S COCKPIT ADJUSTMENT

E. Place child's shoulder harness over child's shoulders.

F. Attach the side-release buckles, sewn to the child's shoulder harness to the mating buckles on the silver webbing sewn to the child's chest pad.

G. The child's shoulder harness can be adjusted up or down by sliding it on the webbing at the back of the child's seat (**Figure 3G**). Adjust the harness so the padded section lies smoothly over the child's shoulders.

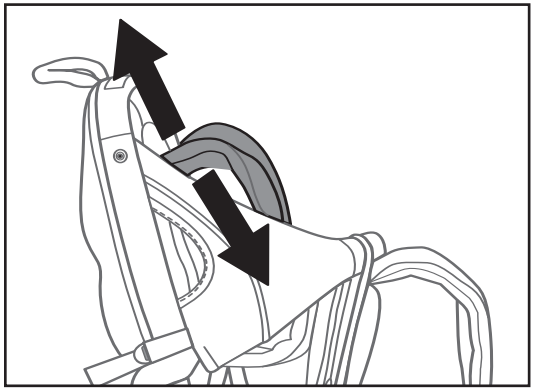

Figure 3G

H. Adjust the leg straps so they fit comfortably over the child's legs by tightening or loosening the leg strap webbing on the back of the cockpit **(Figure 3H)**. Make sure the leg straps are not binding or pinching the child's legs.

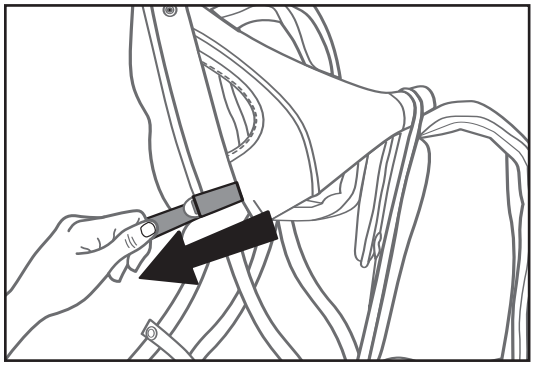

Figure 3H

CONVERSION
CARRIER TO STROLLER

TIPS

NOTE:

- Your Convertible is equipped with dual rear wheel locks.
- Always engage wheel locks when stroller is parked.

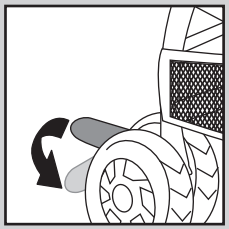

1. Engage wheel locks by gently depressing the red lock levers on both rear sets of wheels.
2. Assure both rear sets of wheels are locked prior to stepping away from the stroller.

4. CARRIER to STROLLER

A. Uncover the front wheels by pulling the wheel cover up (**Figure 4A**). Tuck the waistbelt and lower shoulder straps into the cover (**Figure 4B**).

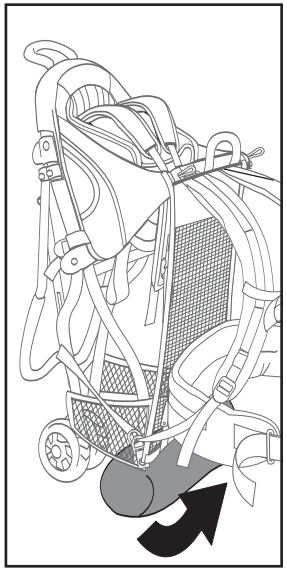

Figure 4A

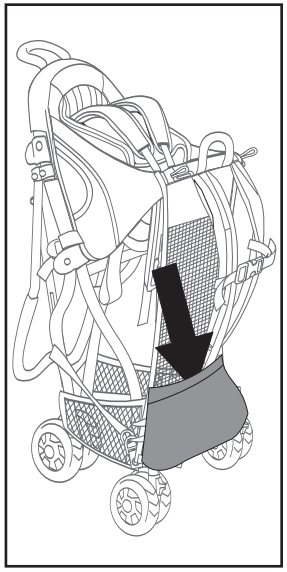

Figure 4B

B. Unlock the front wheels by sliding red lever down (**Figure 4C**).

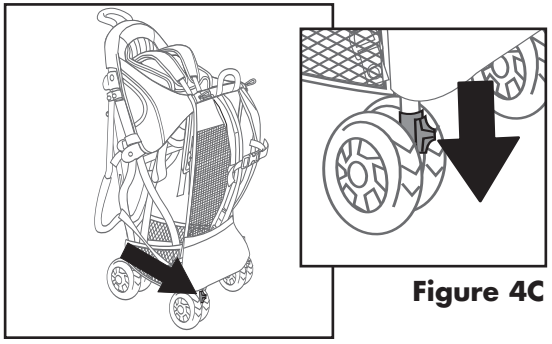

Figure 4C

CONVERSION
CARRIER TO STROLLER

C. Rotate both black plastic clips outward and away from the carrier (**Figure 4D**).

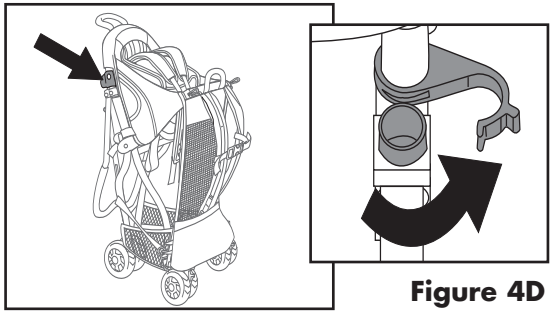

Figure 4D

D. Raise the stroller handle by pulling up and away from the carrier (**Figure 4E** and **4F**).

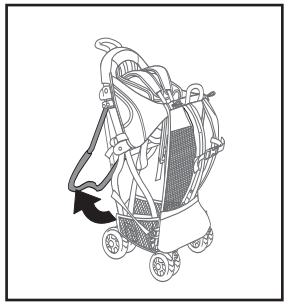

Figure 4E

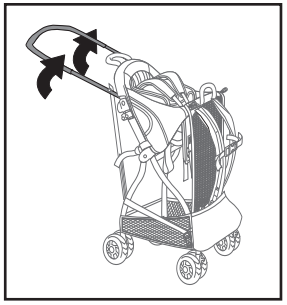

Figure 4F

E. Rotate both black plastic clips inward, locking handle firmly in place (**Figure 4G**).

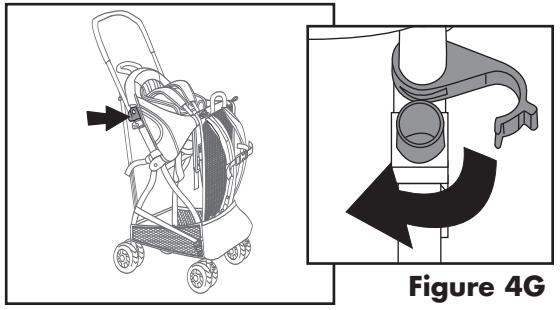

Figure 4G

TIPS

WARNING

If you are uncomfortable with, or unsure of, any of these adjustments, call Kelty Customer Support staff, toll free at 866-349-7225 (866-FIX-PACK).

CONVERSION
STROLLER TO CARRIER

TIPS

NOTE:

- Your Convertible is equipped with dual rear wheel locks.
- Always engage wheel locks when stroller is parked.

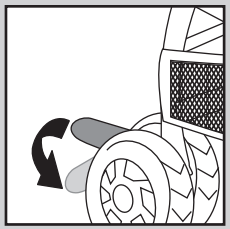

1. Engage wheel locks by gently depressing the red lock levers on both rear sets of wheels.
2. Assure both rear sets of wheels are locked prior to stepping away from the stroller.

5. STROLLER to CARRIER

A. Rotate the black plastic clips (**Figure 5A**), outward, away from the carrier.

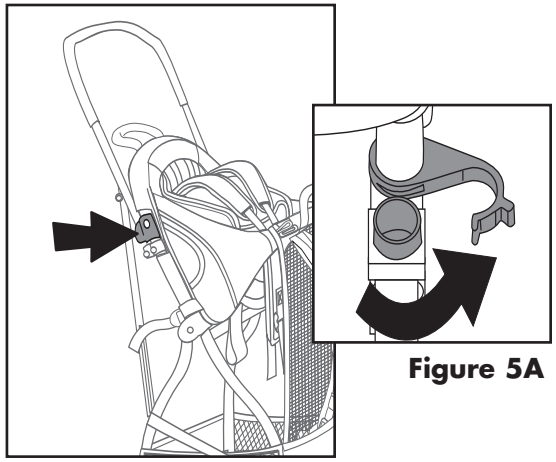

Figure 5A

B. Lower the stroller handle by pushing down towards the carrier (**Figure 5B** and **5C**).

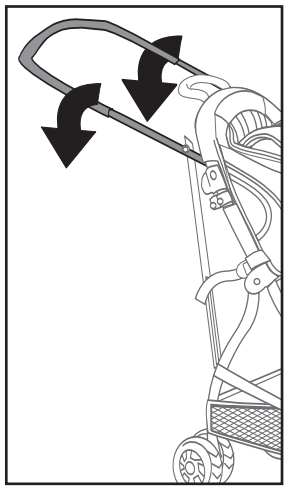

Figure 5B

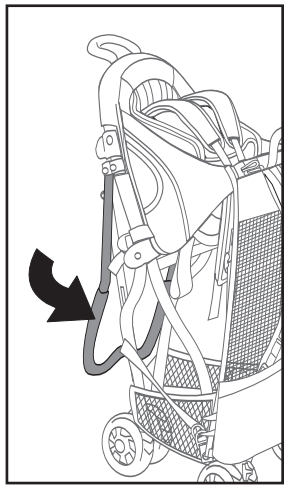

Figure 5C

CONVERSION
STROLLER TO CARRIER

C. Push stroller rear wheels toward front of the Convertible (**Figure 5D**).

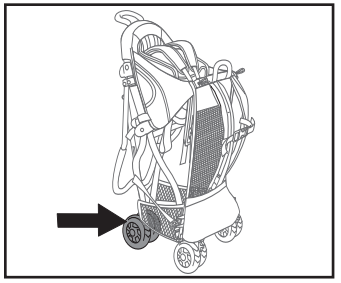

Figure 5D

D. Lock the front wheels in the forward position by aligning the sliding red lever with the locking tab located on the front of the frame. Slide the red lever up to lock (**Figure 5E**).

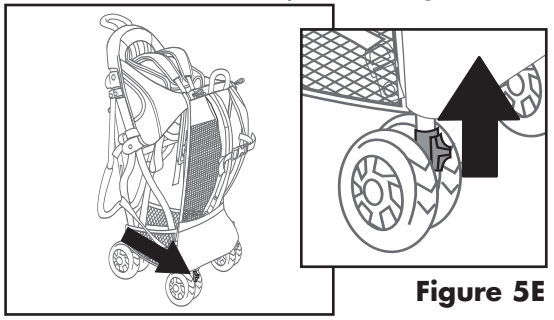

Figure 5E

E. Cover the front wheels by pulling the wheel cover down and around the front wheels (**Figure 5F** and **5G**).

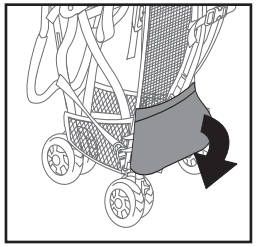

Figure 5F

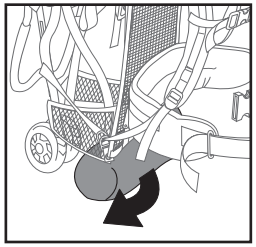

Figure 5G

TIPS

WARNING

If you are uncomfortable with, or unsure of, any of these adjustments, call Kelty Customer Support staff, toll free at 866-349-7225 (866-FIX-PACK).

PUTTING THE CARRIER ON & TAKING THE CARRIER OFF

TIPS

WARNING

CONVERTIBLE TO BE USED BY ADULTS ONLY

- **DO NOT use the stroller while skating, biking or engaging in any activity that will affect your balance.**
- **DO NOT use stroller if you feel faint, dizzy, nauseated or experience muscle pain.**

Failure to follow this warning could cause death, serious injury or permanent disability to you or your child.

6. PUTTING THE CARRIER ON

Before putting carrier on, make sure the cockpit has been adjusted correctly and that both buckles on the child's shoulder harness are properly fastened.

Look around you to be sure there is no obstacle nearby that the child could strike or the carrier could catch on. DO NOT shake or jar the child unnecessarily. DO lift and lower the carrier gently.

Make sure the adult backpack shoulder straps are loose and the waistbelt and sternum strap are unbuckled. Lock and cover the front wheels.

A. With feet approximately shoulder-width apart and knees bent, grasp both red handles (located at the front and rear of the cockpit) firmly and lift the carrier to your knee, resting the front of the lower frame on your thigh.
B. While still grasping the front red handle with one hand, slip your other arm under and through the shoulder strap. Lift the carrier off your knee and onto your shoulder.
C. Carefully release the front red handle and slip carrier onto the other shoulder.
D. Buckle waistbelt and tighten.
E. Tighten shoulder straps and buckle sternum strap.

7. TAKING THE CARRIER OFF

A. Loosen shoulder straps.
B. Unbuckle waistbelt and sternum strap.
C. With feet approximately shoulder-width apart and knees bent, remove one arm from shoulder strap and grasp front red handle (behind head).
D. While still grasping front red handle, rotate your body toward the carrier, allowing the front of the lower frame to rest on your thigh.
E. Remove other arm from shoulder strap and grasp rear red handle.
F. Carefully lower carrier to the floor or to firm, level ground.
G. Move stroller rear wheels out, away from the front of the carrier.

KELTY'S LIFETIME WARRANTY

Kelty takes pride in its workmanship and undertakes to manufacture the best possible products. Therefore, we warranty all Kelty products against defects in materials or workmanship during your lifetime. Since no Kelty product is indestructible, it does not cover defects attributable to or resulting from normal wear and tear, natural hazard damage (i.e.: weather, animals), abuse or alteration (i.e.: ultra violet [u.v.] damage on tents, exhausted zippers).

Service under our warranty is available to the original purchaser by returning the product to any authorized Kelty dealer or by contacting our customer service department at 1-866-349-7225 (1-866-FIX-PACK) for return authorization. Charges for shipping and insuring your package to Kelty are your responsibility. Please be sure to insure any shipment, as Kelty cannot be responsible for uninsured packages. We require that all products returned for warranty and repair be properly cleaned. If, after inspection, we determine that the product is defective, we will repair or replace it free of charge. If your Kelty product needs service or repair that is not covered under warranty, we will provide the necessary service at a reasonable charge. This warranty gives you, the original purchaser, specific legal rights. You may also have other rights, which vary from state to state.

AMERICAN RECREATION PRODUCTS INC.

ASTM

JPMA

6235 Lookout Road, Boulder Colorado 80301
phone 800.423.2320 • fax 800.504.2745 • www.kelty.com